

User's Guide for the LMZM23601 and LMZM23600 Evaluation Boards

The evaluation modules (EVM) for the LMZM23601 and LMZM23600 are designed as easy-to-use platforms to help evaluate the features and performance of these DC/DC step-down power modules. This guide provides an overview of the board settings and board layout along with connection diagrams and several performance curves for each device in the family.

Contents

1	Description	3
2	Getting Started	4
3	Schematic.....	6
3.1	Adjustable Output Voltage Versions.....	6
3.2	Fixed Output Voltage Versions.....	7
4	Bill of Materials	8
4.1	Adjustable Output Voltage Versions.....	8
4.2	Fixed Output Voltage Versions.....	9
5	Performance Data.....	10
5.1	$V_{OUT} = 15\text{ V}$	10
5.2	$V_{OUT} = 12\text{ V}$	11
5.3	$V_{OUT} = 5\text{ V}$	12
5.4	$V_{OUT} = 3.3\text{ V}$	13
5.5	$V_{OUT} = 2.5\text{ V}$	14
6	PCB Layout	15
6.1	Adjustable Output Voltage Versions	15
6.2	Fixed Output Voltage Versions	19

List of Figures

1	EVM User Interface for the Adjustable Output Voltage Options.....	4
2	EVM User Interface for the Fixed (5-V and 3.3-V) Output Voltage Options	4
3	Jumper Configuration Details for Each Board	5
4	Schematic for the Adjustable Output Voltage Versions of the Module	6
5	Schematic for the Fixed Output Voltage Versions of the Module	7
6	Bill Of Materials for the Adjustable Output Voltage Versions of the Module.....	8
7	Bill Of Materials for the Fixed Output Voltage Versions of the Module	9
8	Efficiency for $V_{OUT} = 15\text{ V}$	10
9	Load Transient Response for $V_{OUT} = 15\text{ V}$ 10% to 100% Load Step, FPWM	10
10	Output Ripple for $V_{OUT} = 15\text{ V}$, 20 MHz BW.....	10
11	Output Ripple for $V_{OUT} = 15\text{ V}$, 250 MHz BW	10
12	Efficiency for $V_{OUT} = 12\text{ V}$	11
13	Load Transient Response for $V_{OUT} = 12\text{ V}$ 10% to 100% Load Step, FPWM	11
14	Output Ripple for $V_{OUT} = 12\text{ V}$, 20 MHz BW.....	11
15	Output Ripple for $V_{OUT} = 12\text{ V}$, 250 MHz BW	11
16	Efficiency for $V_{OUT} = 5\text{ V}$	12
17	Load Transient Response for $V_{OUT} = 5\text{ V}$ 10% to 100% Load Step, FPWM.....	12

18	Output Ripple for $V_{OUT} = 5$ V, 20 MHz BW	12
19	Output Ripple for $V_{OUT} = 5$ V, 250 MHz BW.....	12
20	Efficiency for $V_{OUT} = 3.3$ V	13
21	Load Transient Response for $V_{OUT} = 3.3$ V 10% to 100% Load Step, FPWM	13
22	Output Ripple for $V_{OUT} = 3.3$ V, 20 MHz BW.....	13
23	Output Ripple for $V_{OUT} = 3.3$ V, 250 MHz BW	13
24	Efficiency for $V_{OUT} = 2.5$ V	14
25	Load Transient Response for $V_{OUT} = 2.5$ V 10% to 100 % Load Step, FPWM.....	14
26	Output Ripple for $V_{OUT} = 2.5$ V, 20 MHz BW.....	14
27	Output Ripple for $V_{OUT} = 2.5$ V, 250 MHz BW	14
28	Adjustable Output Board Layout - Top Overlay	15
29	Adjustable Output Board Layout - Top Soldermask	15
30	Adjustable Output Board Layout - Top Layer Copper	16
31	Adjustable Output Board Layout - Mid Layer 1 (under top layer) Copper	16
32	Adjustable Output Board Layout - Mid Layer 2 (above bottom layer) Copper	17
33	Adjustable Output Board Layout - Bottom Layer Copper	17
34	Adjustable Output Board Layout - Bottom Soldermask	18
35	Adjustable Output Board Layout - Bottom Overlay	18
36	Fixed Output Board Layout - Top Overlay	19
37	Fixed Output Board Layout - Top Soldermask	19
38	Fixed Output Board Layout - Top Layer Copper	20
39	Fixed Output Board Layout - Mid Layer 1 (under top layer) Copper	20
40	Fixed Output Board Layout - Mid Layer 2 (above bottom layer) Copper	21
41	Fixed Output Board Layout - Bottom Layer Copper	21
42	Fixed Output Board Layout - Bottom Soldermask	22
43	Fixed Output Board Layout - Bottom Overlay	22

1 Description

The LMZM23601 and LMZM23600 are miniature, simple, and easy-to-use DC/DC converter modules ideal for applications where board space is limited and an efficient power conversion is needed. Both the LMZM23600 and the LMZM23601 support an input range of 4 V to 36 V. This range makes the modules suitable to be powered from various 5-V, 12-V, or 24-V supplies. The LMZM23600 supports load current of up to 0.5 A, and the LMZM23601 can deliver up to 1 A of current. Features of the devices include a precision enable circuit, input UVLO circuit, built-in soft start, light load mode selection for exceptional power savings or constant frequency operation, switching frequency synchronization to an external clock, power-good flag, and current limit protection. More details about the operating range, features, and specifications of the LMZM23601 and LMZM23600 can be found in the device [data sheet](#).

The output voltage for the adjustable (ADJ) version can be configured between 2.5 V and 15 V. There are also fixed output options of the devices for 5-V and 3.3-V outputs and each voltage option comes in two output current choices: 0.5 A and 1 A. There are two main evaluation boards - one for the ADJ output voltage options and one for the fixed 5-V and 3.3-V outputs. The ADJ output board comes in two variants, one for the 1-A capable devices and one for the 0.5-A current option. The fixed output voltage option boards also come in two output current variations. [Table 1](#) summarizes the available evaluation boards for this module family.

Table 1. Available Evaluation Boards

Output Voltage	Output Current	Device	Evaluation Board Orderable P/N	Board ID
ADJ (2.5 V to 15 V)	1 A	LMZM23601	LMZM23601EVM	BSR017-001
ADJ (2.5 V to 15 V)	0.5 A	LMZM23600	LMZM23600EVM	BSR017-002
5 V	1 A	LMZM23601V5	LMZM23601V5EVM	BSR018-001
5 V	0.5 A	LMZM23600V5	LMZM23600V5EVM	BSR018-002
3.3 V	1 A	LMZM23601V3	LMZM23601V3EVM	BSR018-003
3.3 V	0.5 A	LMZM23600V3	LMZM23600V3EVM	BSR018-004

2 Getting Started

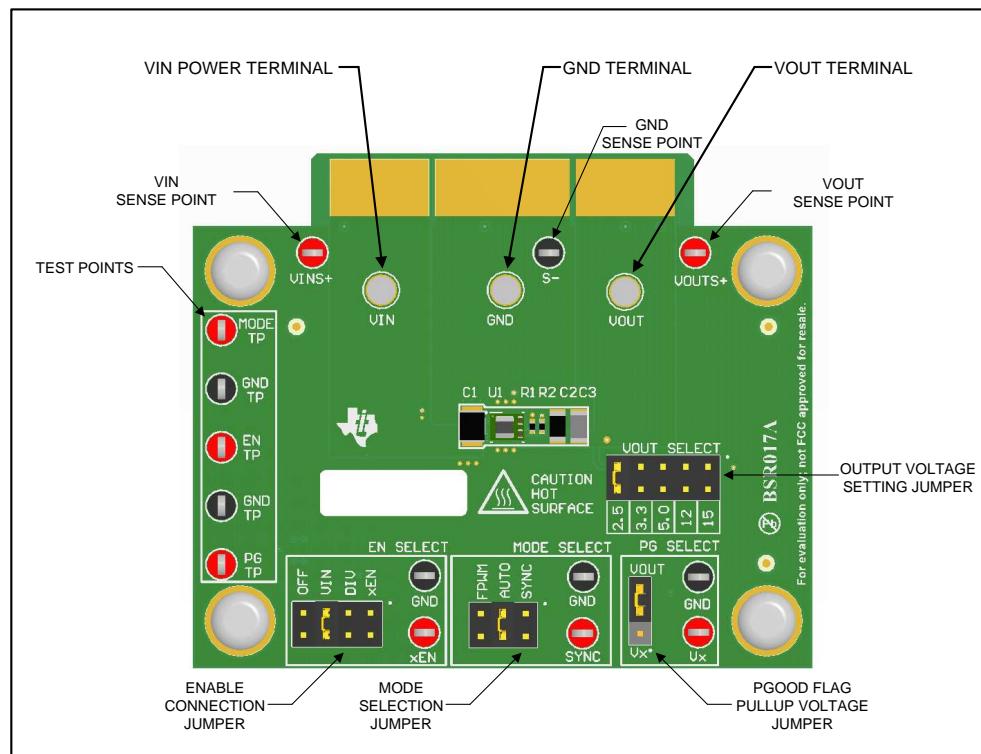


Figure 1. EVM User Interface for the Adjustable Output Voltage Options

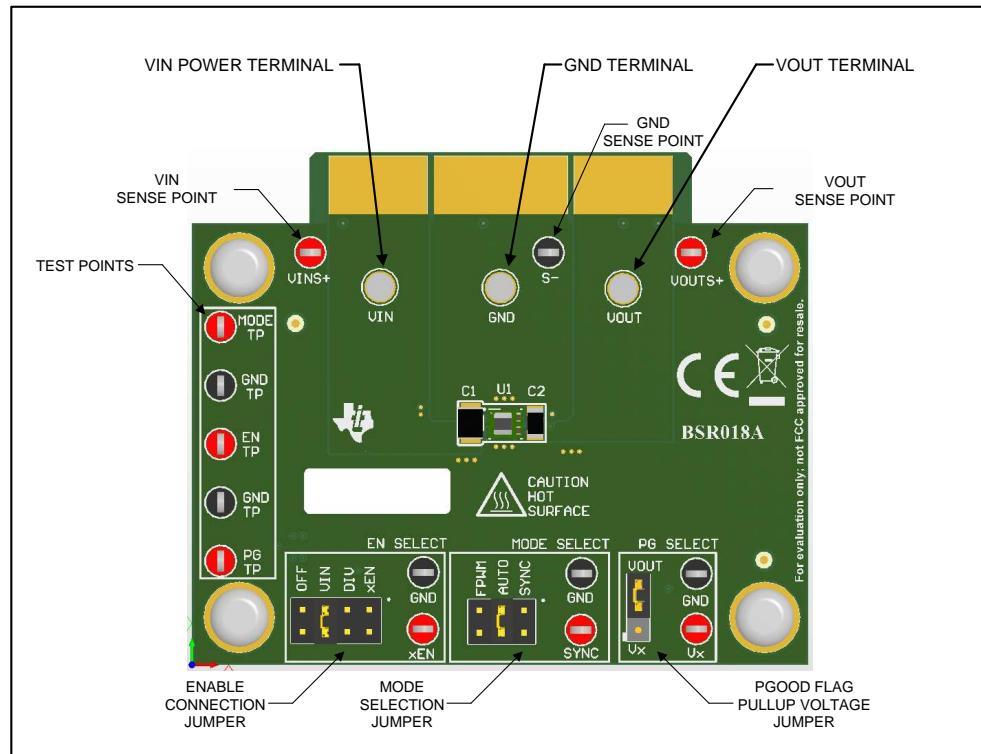


Figure 2. EVM User Interface for the Fixed (5-V and 3.3-V) Output Voltage Options

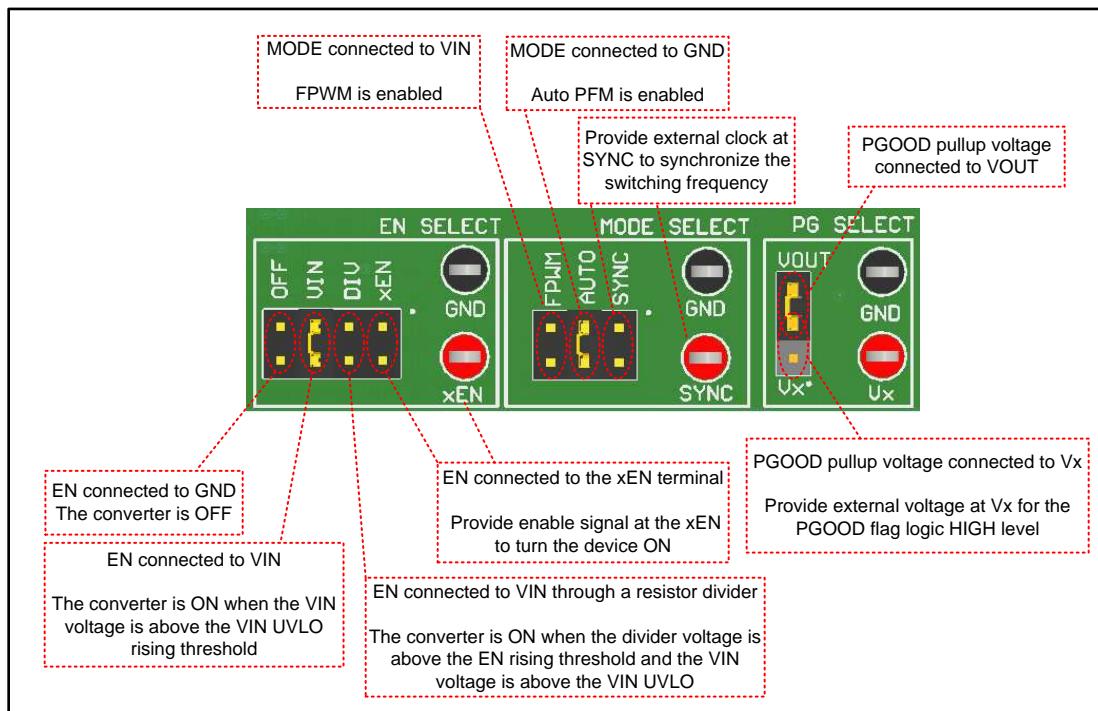


Figure 3. Jumper Configuration Details for Each Board

Before applying power to the EVM, ensure that all of the jumpers are in place and are properly positioned for the intended feature setting and output voltage operation. Always shut down the input power supply before changing any of the jumper settings. [Figure 1](#) and [Figure 3](#) above provide an overview of the board connection terminals, jumper setting options, and test points.

Use the "VIN POWER TERMINAL" and "GND TERMINAL" turrets to connect the board to the input supply. Connect the load between the "VOUT TERMINAL" and "GND TERMINAL".

For the adjustable output version of the board, the output voltage setting jumper configures the feedback resistor divider pair for various popular output voltages: 2.5 V, 3.3 V, 5 V, 12 V, or 15 V. Voltage sense points are provided to help read the input voltage and output voltage directly at the regulator. The sense lines should not be used for power connections. There are several test points provided on the left hand side of the board. They can be used to monitor the voltage signals at the MODE, EN, and PG pins of the device.

The EN selection jumper allows the user to select the desired enabling scheme for the end application. The LMZM23600 and LMZM23601 feature a precision enable input which can be used to set the input UVLO point with a voltage divider from the input voltage. Alternatively, the enable input can be driven by a logic signal or it could be tied directly to VIN for an always-on operation.

The MODE selection jumper sets the DC/DC converter mode of operation at light load. When Auto PFM mode is selected, the converter will enter PFM mode at light load and reduce the switching frequency in order to maintain high conversion efficiency. Some applications may require that the regulator maintains constant switching frequency across the entire load range. In such cases the mode pin can be used to set forced PWM operation at light load. The mode terminal can also be used to synchronize the converter switching frequency to an external clock. If frequency synchronization is used, the converter will operate in forced PWM mode at light load.

The PGOOD flag jumper allows the user to either connect the PGOOD pullup resistor to VOUT or provide an external voltage rail for the logic HIGH voltage level.

3 Schematic

3.1 Adjustable Output Voltage Versions

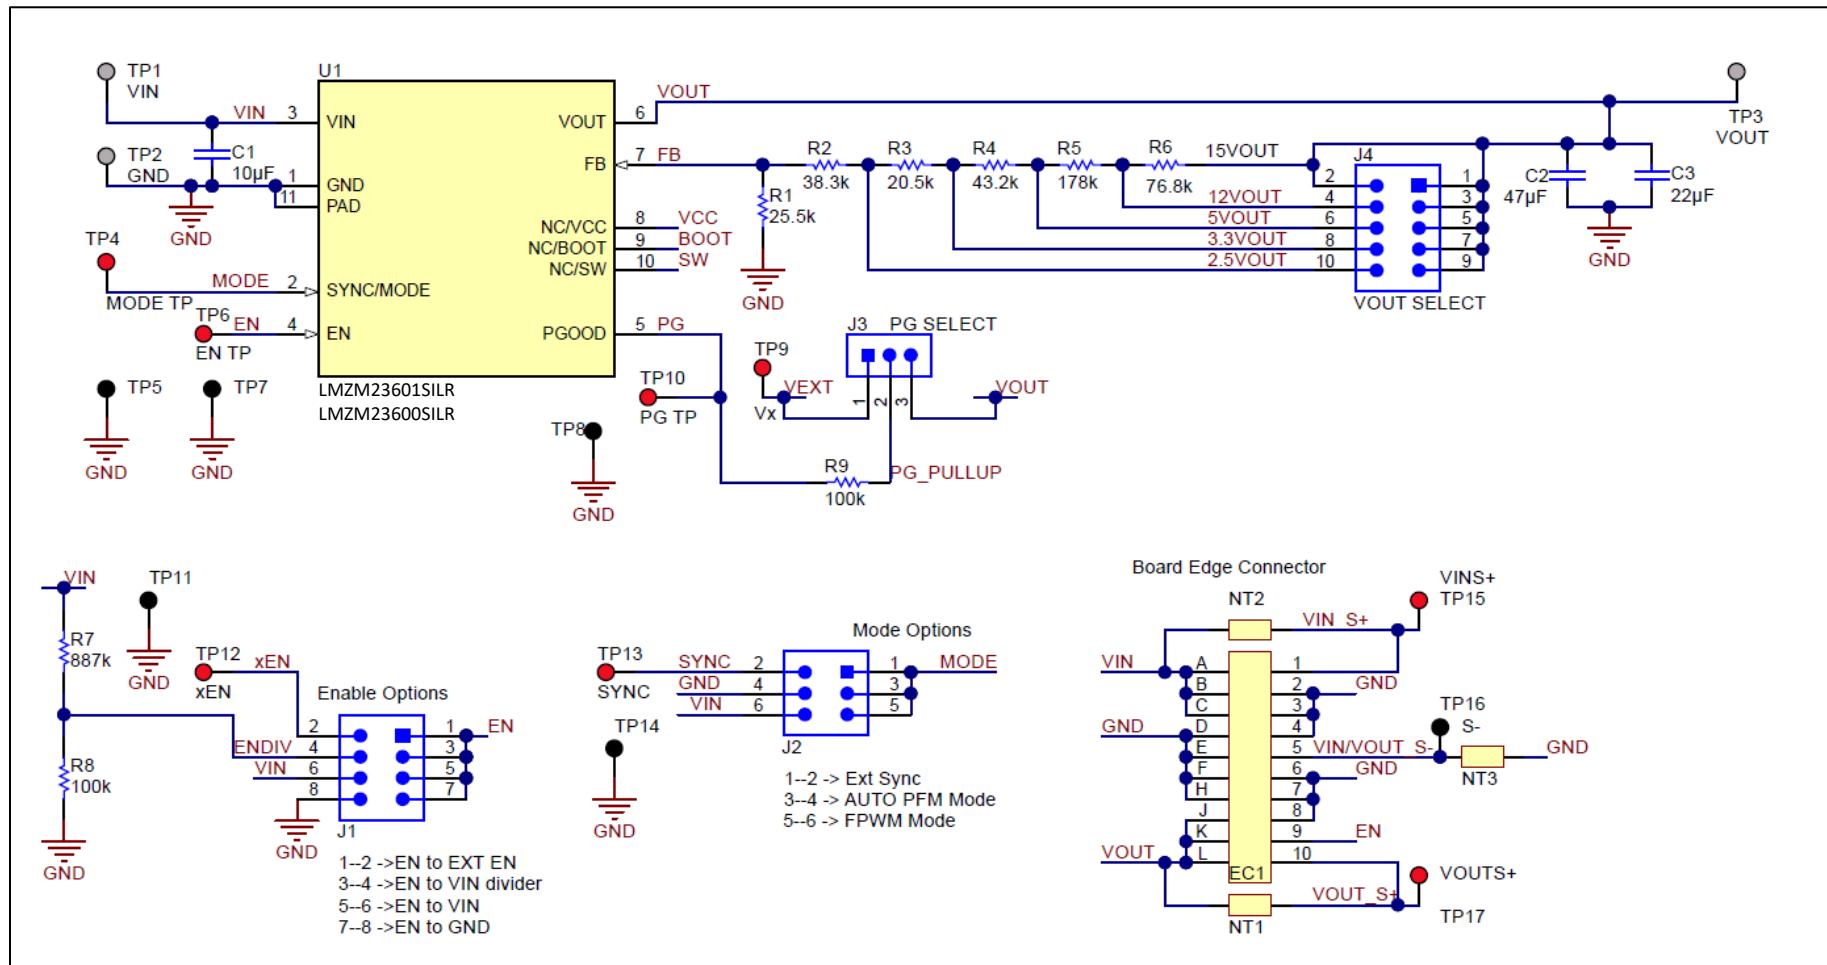


Figure 4. Schematic for the Adjustable Output Voltage Versions of the Module

3.2 Fixed Output Voltage Versions

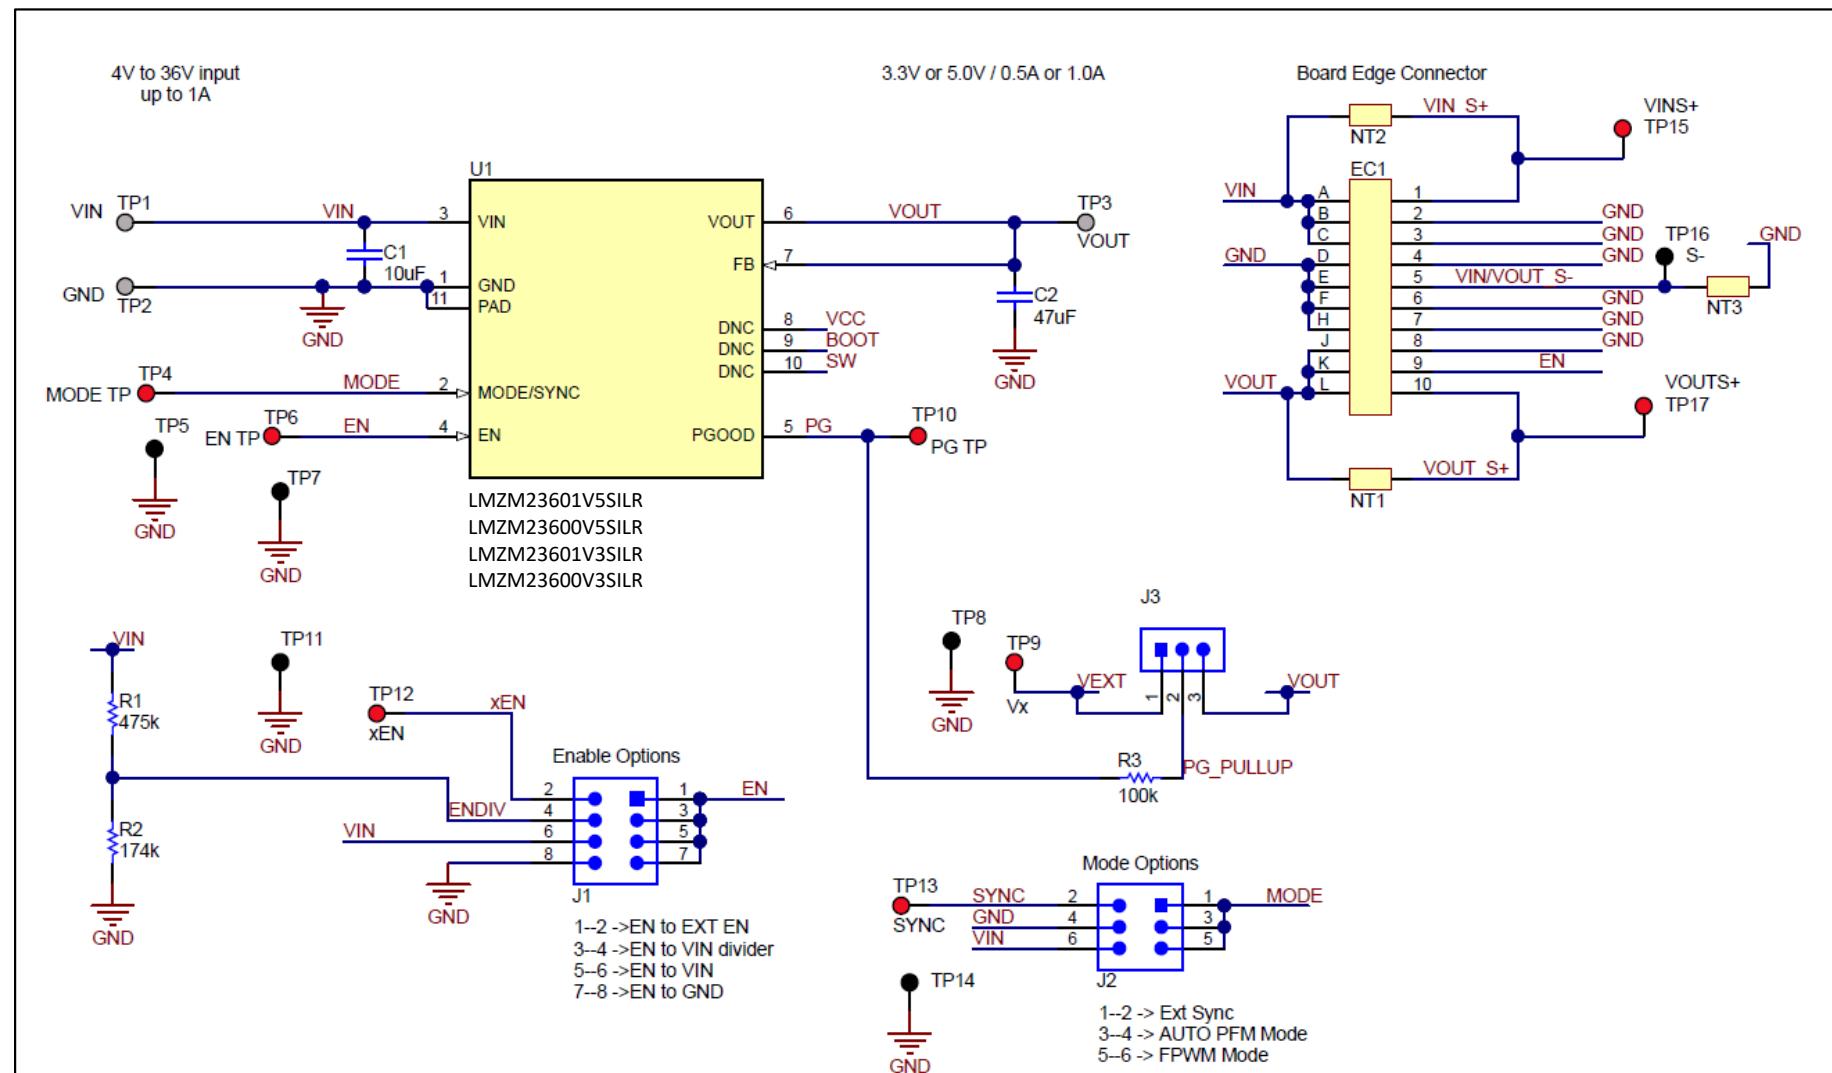


Figure 5. Schematic for the Fixed Output Voltage Versions of the Module

4 Bill of Materials

4.1 Adjustable Output Voltage Versions

Designator	Quantity	Value	Description	Part Number	Manufacturer
C1	1	10uF	Input capacitor, 10 μ F, 50 V, +/- 20%, X7R, 1210	C3225X7R1H106M250AC	TDK
C2	1	47uF	Output capacitor, 47 μ F, 16 V, +/- 15%, X5R, 1206	C3216X5R1C476M160AB	TDK
C3	1	22uF	Output capacitor, 22 μ F, 25 V, +/- 10%, X5R, 1206	GRM31CR61E226KE15L	MuRata
J1	1		Header, 100mil, 4x2, Gold, TH	TSW-104-07-G-D	Samtec
J2	1		Header, 100mil, 3x2, Gold, TH	TSW-103-07-G-D	Samtec
J3	1		Header, 100mil, 3x1, Gold, TH	HTSW-103-07-G-S	Samtec
J4	1		Header, 100mil, 5x2, Gold, TH	TSW-105-07-G-D	Samtec
R1	1	25.5k	Resistor, 25.5 k, 1%, 0.063 W, 0402	CRCW040225K5FKED	Vishay-Dale
R2	1	38.3k	Resistor, 38.3 k, 1%, 0.063 W, 0402	CRCW040238K3FKED	Vishay-Dale
R3	1	20.5k	Resistor, 20.5 k, 1%, 0.063 W, 0402	CRCW040220K5FKED	Vishay-Dale
R4	1	43.2k	Resistor, 43.2 k, 1%, 0.063 W, 0402	CRCW040243K2FKED	Vishay-Dale
R5	1	178k	Resistor, 178 k, 1%, 0.063 W, 0402	CRCW0402178KFKED	Vishay-Dale
R6	1	76.8k	Resistor, 76.8 k, 1%, 0.063 W, 0402	CRCW040276K8FKED	Vishay-Dale
R7	1	887k	Resistor, 887 k, 1%, 0.1 W, 0603	CRCW0603887KFKEA	Vishay-Dale
R8, R9	2	100k	Resistor, 100 k, 1%, 0.1 W, 0603	CRCW0603100KFKEA	Vishay-Dale
SH-J1, SH-J2, SH-J3, SH-J4	4	1x2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
TP1, TP2, TP3	3		Terminal, Turret, TH, Triple	1598-2	Keystone
TP4, TP6, TP9, TP10, TP12, TP13, TP15, TP17	8		Test Point, Multipurpose, Red, TH	5010	Keystone
TP5, TP7, TP8, TP11, TP14, TP16	6		Test Point, Multipurpose, Black, TH	5011	Keystone
U1	1		Nano Module with 36 V Maximum Input Voltage, SIL0010A (uSIP-10)	LMZM23601SILR for 1.0A or LMZ23600SILR for 0.5A	Texas Instruments

Figure 6. Bill Of Materials for the Adjustable Output Voltage Versions of the Module

4.2 Fixed Output Voltage Versions


Designator	Quantity	Value	Description	PartNumber	Manufacturer
C1	1	10uF	CAP, CERM, 10 uF, 50 V, +/- 20%, X7R, 1210	C3225X7R1H106M250AC	TDK
C2	1	47uF	CAP, CERM, 47 uF, 16 V, +/- 15%, X5R, 1206	C3216X5R1C476M160AB	TDK
J1	1		Header, 100mil, 4x2, Gold, TH	TSW-104-07-G-D	Samtec
J2	1		Header, 100mil, 3x2, Gold, TH	TSW-103-07-G-D	Samtec
J3	1		Header, 100mil, 3x1, TH	800-10-003-10-001000	Mill-Max
R1	1	475k	RES, 475 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603475KFKEA	Vishay-Dale
R2	1	174k	RES, 174 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603174KFKEA	Vishay-Dale
R3	1	100k	RES, 100 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603100KFKEA	Vishay-Dale
SH-J1, SH-J2, SH-J3	3	1x2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
TP1, TP2, TP3	3		Terminal, Turret, TH, Triple	1598-2	Keystone
TP4, TP6, TP9, TP10, TP12, TP13, TP15, TP17	8		Test Point, Multipurpose, Red, TH	5010	Keystone
TP5, TP7, TP8, TP11, TP14, TP16	6		Test Point, Multipurpose, Black, TH	5011	Keystone
U1	1		36-V Step-Down DC-DC Module, SIL0010A (uSIP-10)	LMZM23601V5SILR LMZM23600V5SILR LMZM23601V3SILR LMZM23600V3SILR	Texas Instruments

Figure 7. Bill Of Materials for the Fixed Output Voltage Versions of the Module

5 Performance Data

The following section demonstrates the LMZM23601 evaluation board performance using the adjustable output voltage option of the device.

5.1 $V_{OUT} = 15$ V

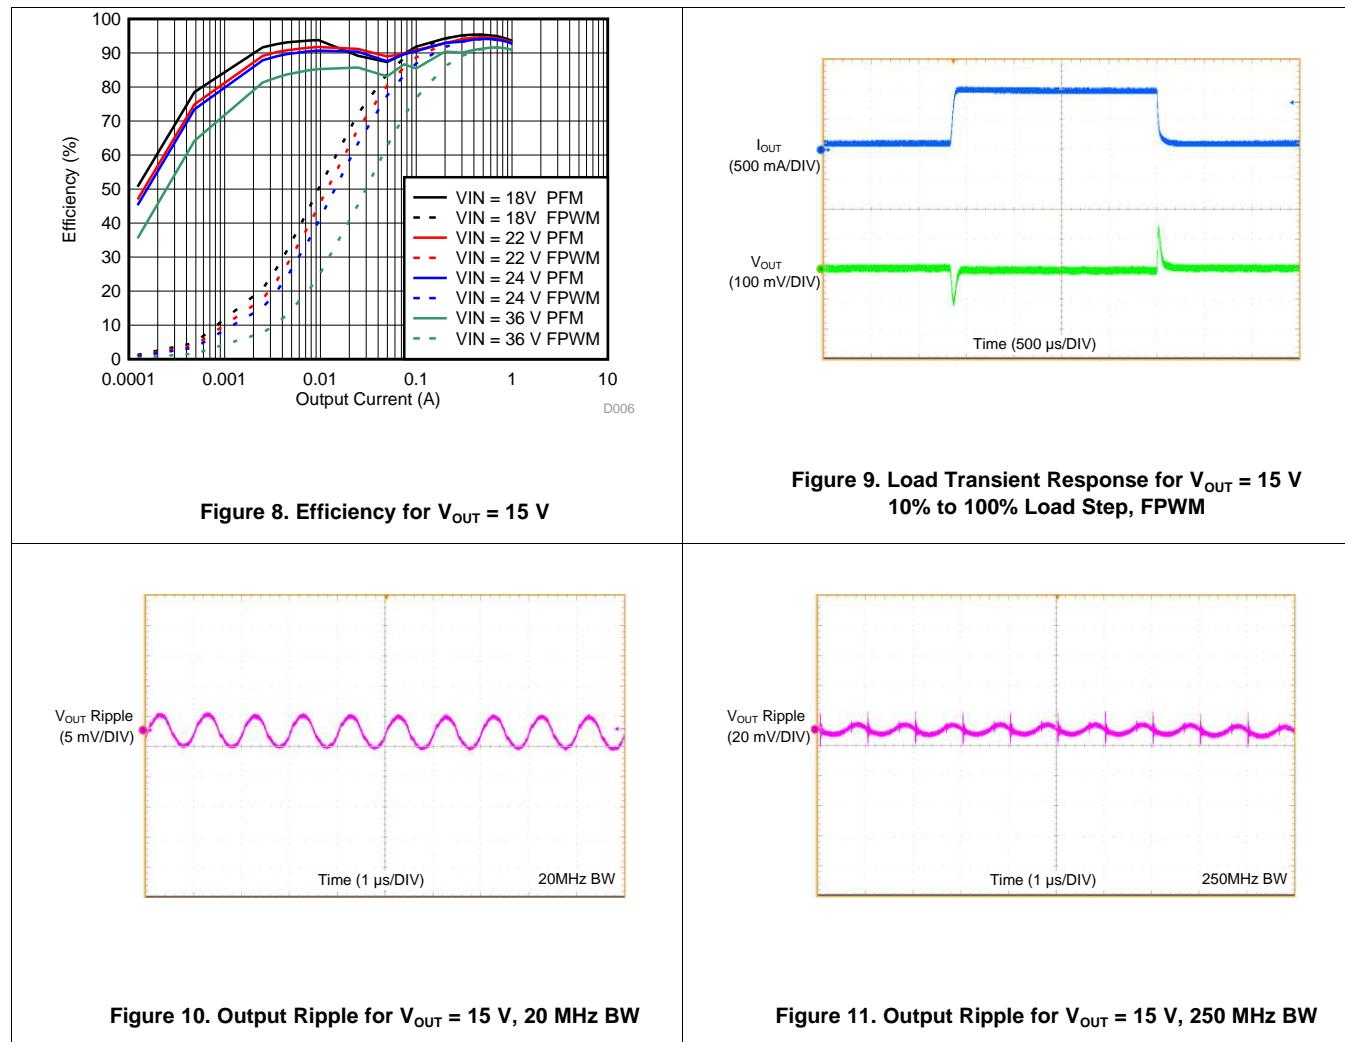

5.2 $V_{OUT} = 12\text{ V}$

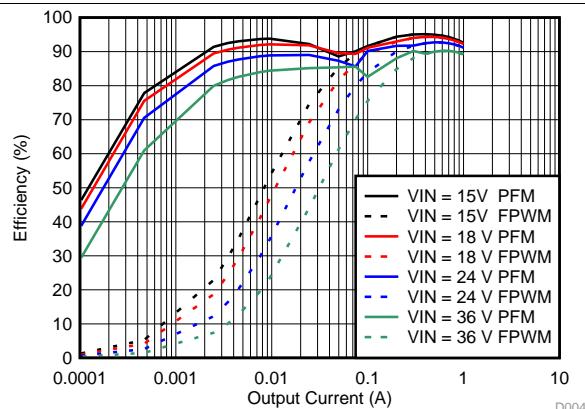


Figure 12. Efficiency for $V_{OUT} = 12\text{ V}$

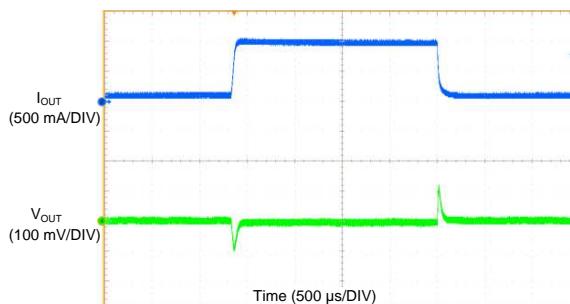


Figure 13. Load Transient Response for $V_{OUT} = 12\text{ V}$
10% to 100% Load Step, FPWM

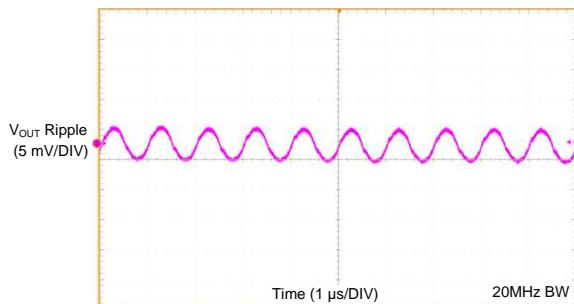


Figure 14. Output Ripple for $V_{OUT} = 12\text{ V}$, 20 MHz BW


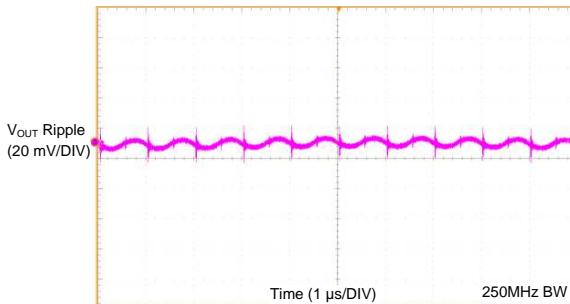


Figure 15. Output Ripple for $V_{OUT} = 12\text{ V}$, 250 MHz BW

5.3 $V_{OUT} = 5 V$

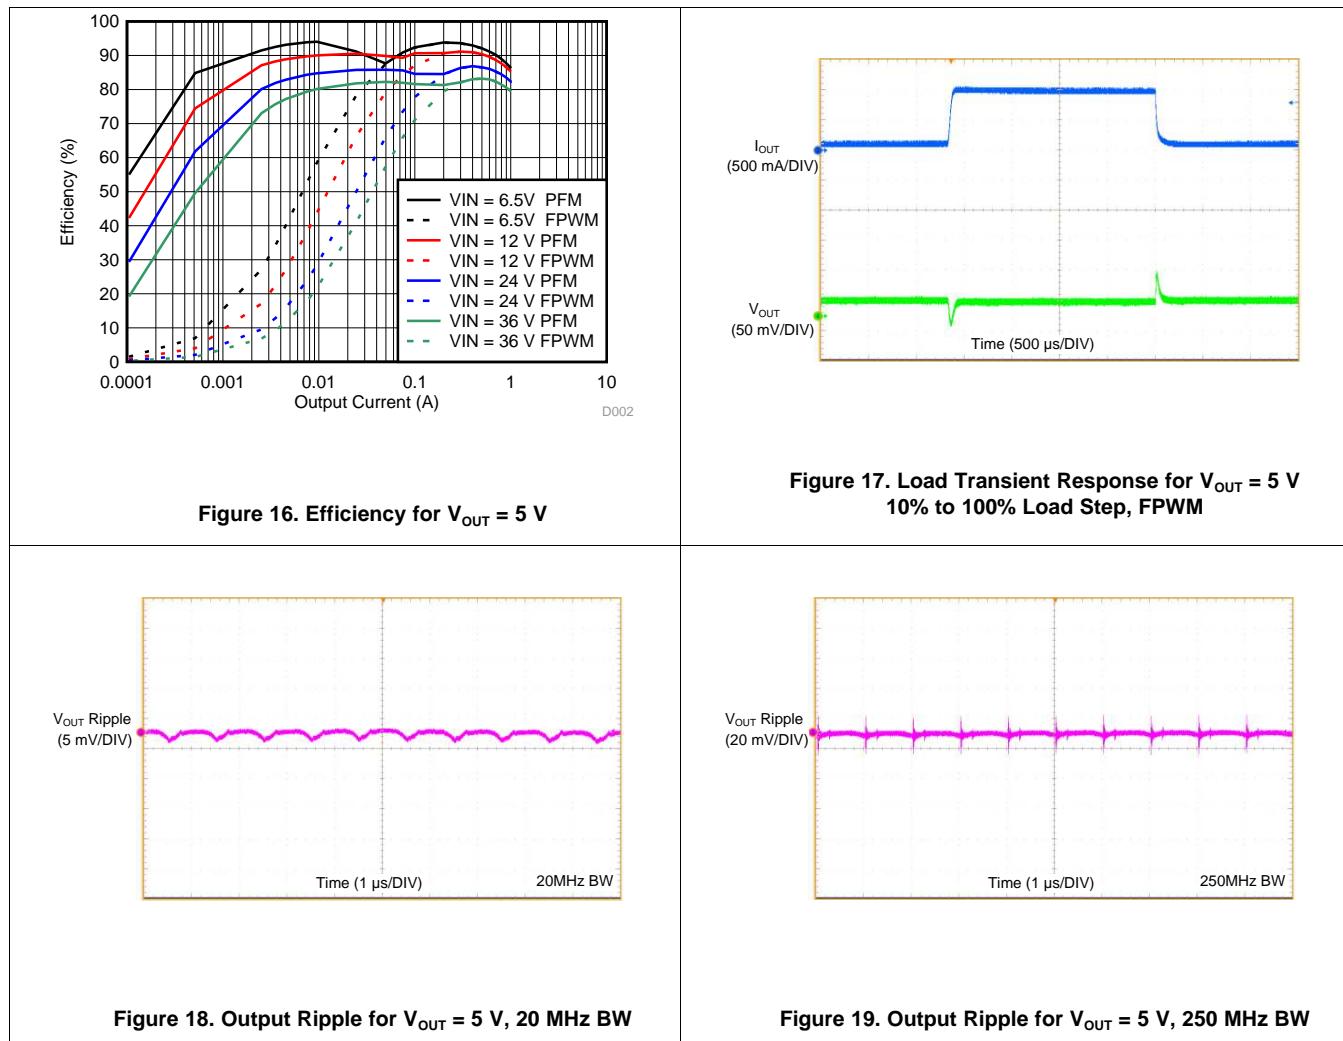

5.4 $V_{OUT} = 3.3\text{ V}$

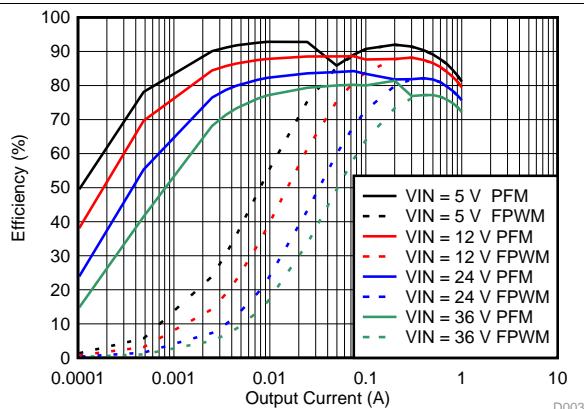


Figure 20. Efficiency for $V_{OUT} = 3.3\text{ V}$

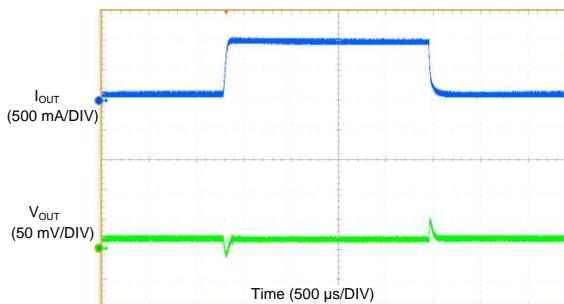


Figure 21. Load Transient Response for $V_{OUT} = 3.3\text{ V}$
10% to 100% Load Step, FPWM

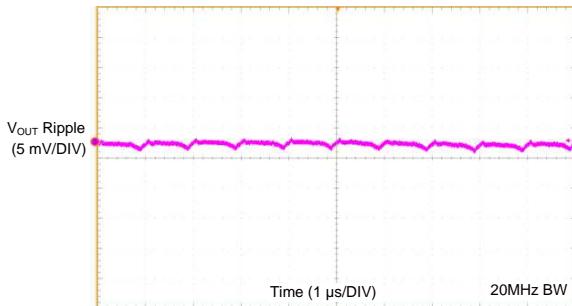


Figure 22. Output Ripple for $V_{OUT} = 3.3\text{ V}$, 20 MHz BW

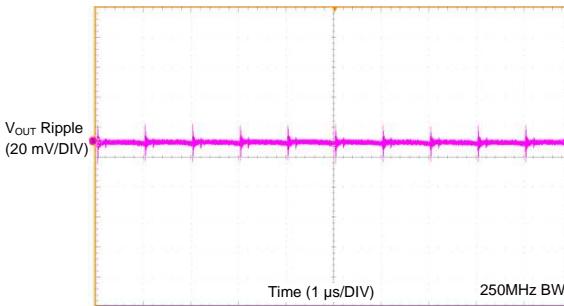


Figure 23. Output Ripple for $V_{OUT} = 3.3\text{ V}$, 250 MHz BW

5.5 $V_{OUT} = 2.5 \text{ V}$

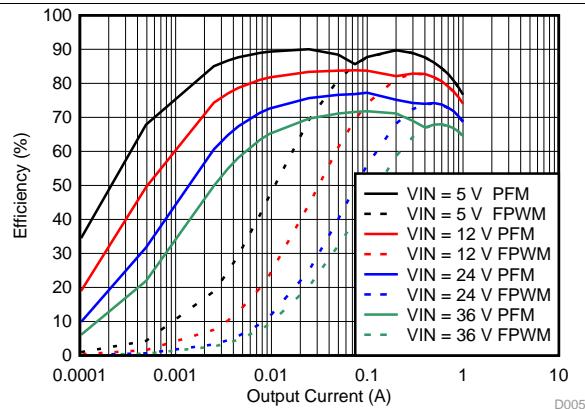


Figure 24. Efficiency for $V_{OUT} = 2.5 \text{ V}$

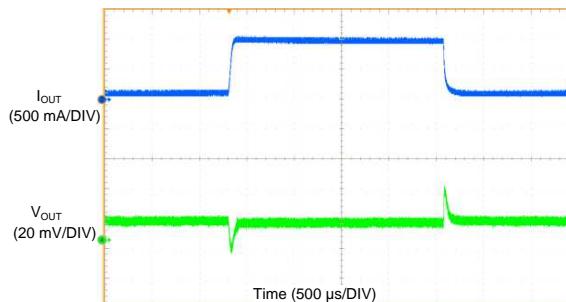


Figure 25. Load Transient Response for $V_{OUT} = 2.5 \text{ V}$
10% to 100 % Load Step, FPWM

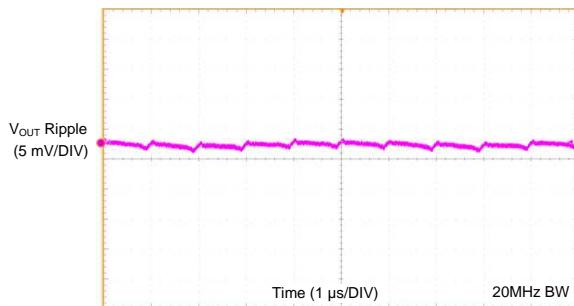


Figure 26. Output Ripple for $V_{OUT} = 2.5 \text{ V}$, 20 MHz BW

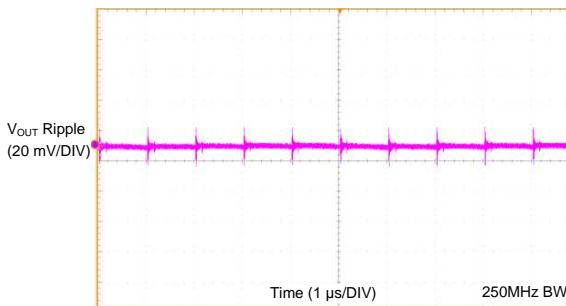


Figure 27. Output Ripple for $V_{OUT} = 2.5 \text{ V}$, 250 MHz BW

6 PCB Layout

This section of the user's guide describes the PCB layout of the LMZM23601 boards. The layout is the same for the LMZM23600 versions.

The boards have 4 copper layers. The boards dimensions are 58 mm (2.3 inches) x 70 mm (2.75 inches).

6.1 Adjustable Output Voltage Versions

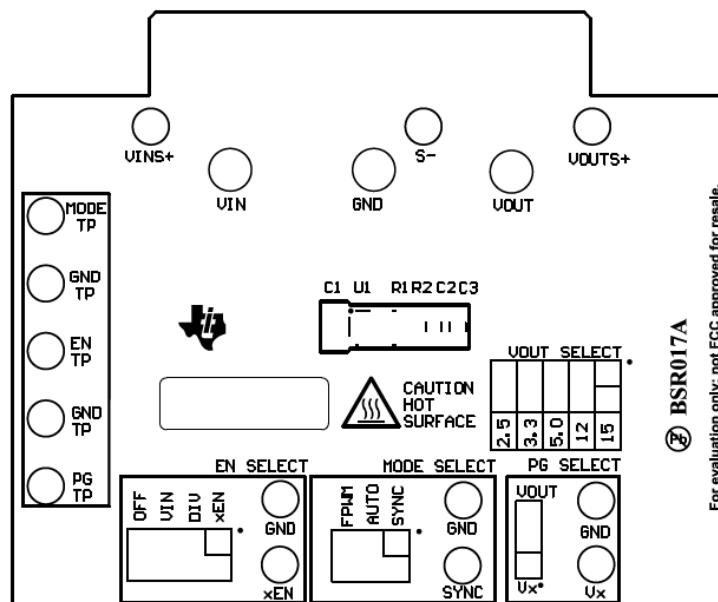


Figure 28. Adjustable Output Board Layout - Top Overlay

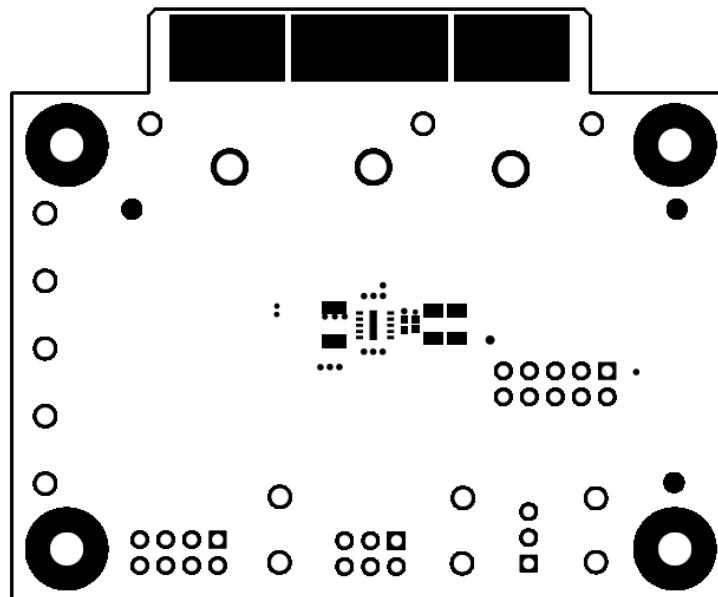


Figure 29. Adjustable Output Board Layout - Top Soldermask

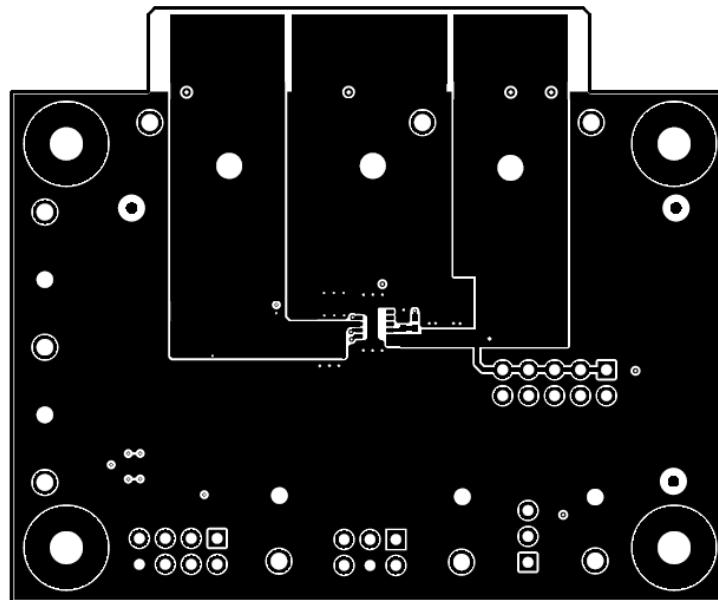


Figure 30. Adjustable Output Board Layout - Top Layer Copper

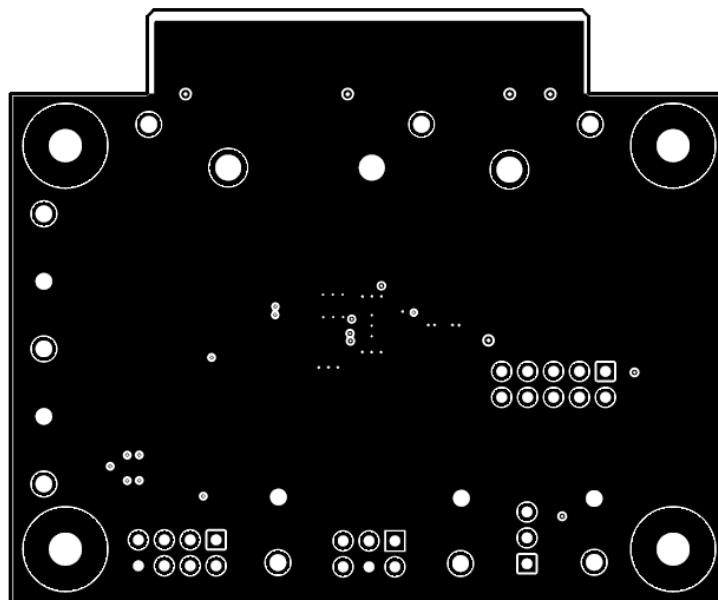


Figure 31. Adjustable Output Board Layout - Mid Layer 1 (under top layer) Copper

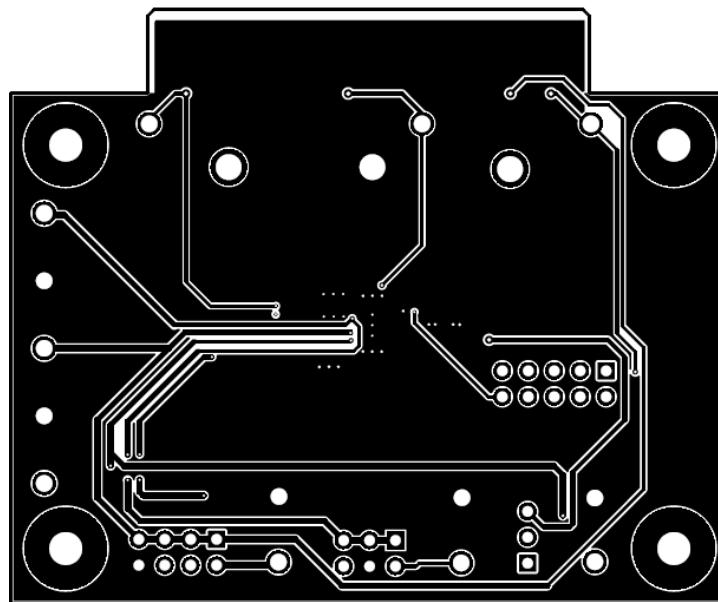


Figure 32. Adjustable Output Board Layout - Mid Layer 2 (above bottom layer) Copper

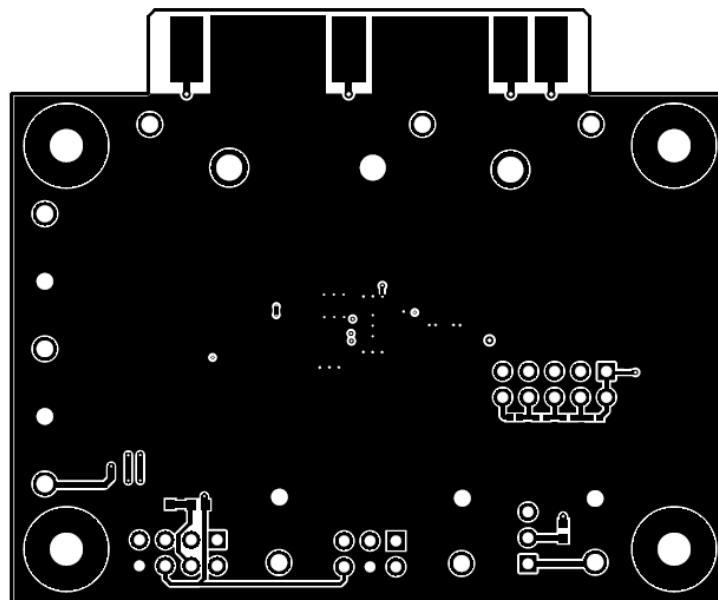


Figure 33. Adjustable Output Board Layout - Bottom Layer Copper

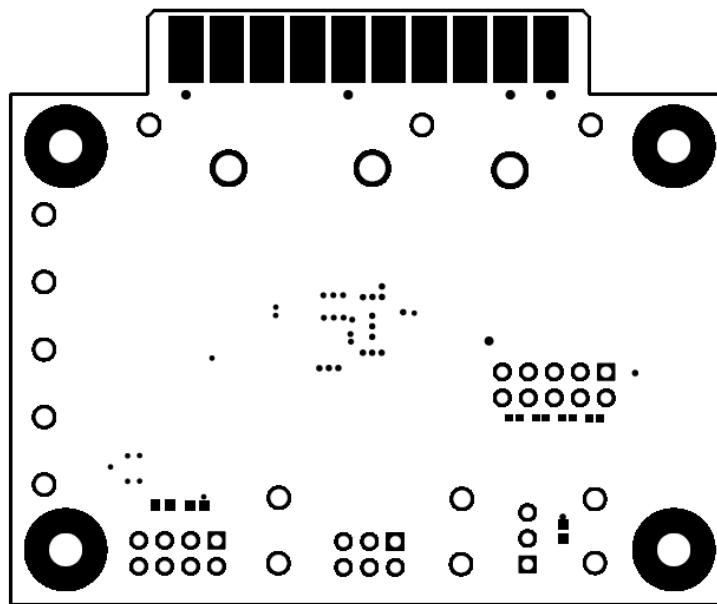


Figure 34. Adjustable Output Board Layout - Bottom Soldermask

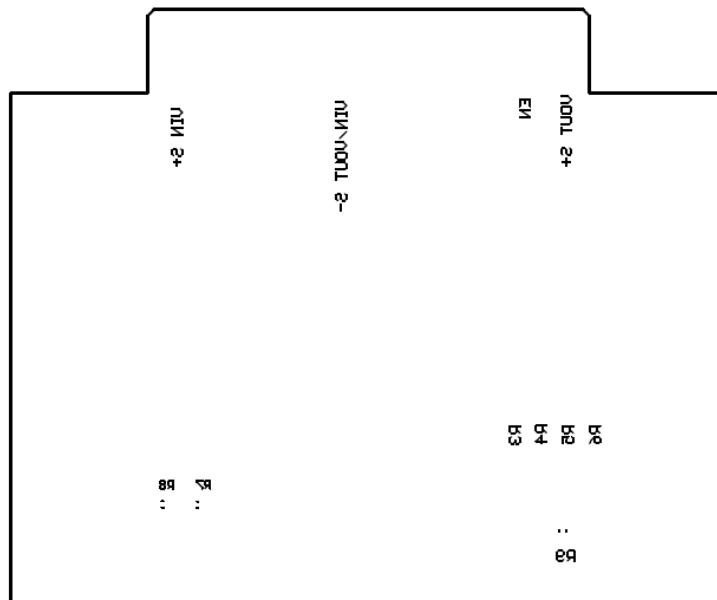


Figure 35. Adjustable Output Board Layout - Bottom Overlay

6.2 Fixed Output Voltage Versions

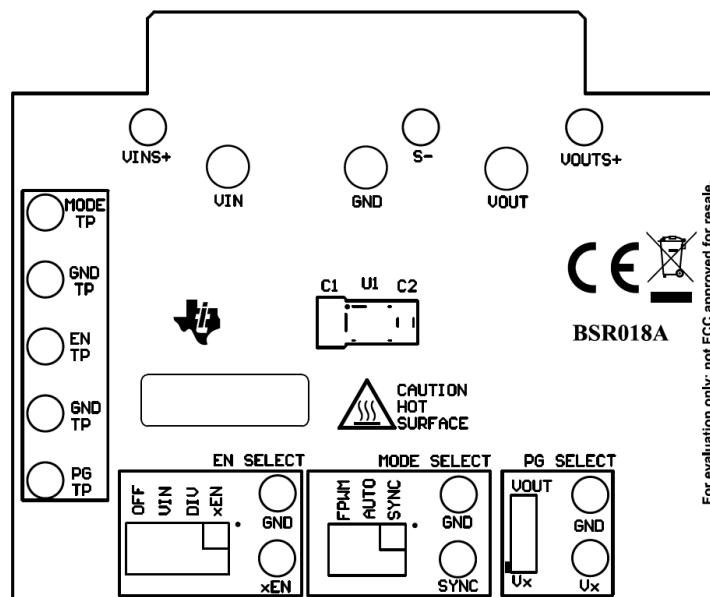


Figure 36. Fixed Output Board Layout - Top Overlay

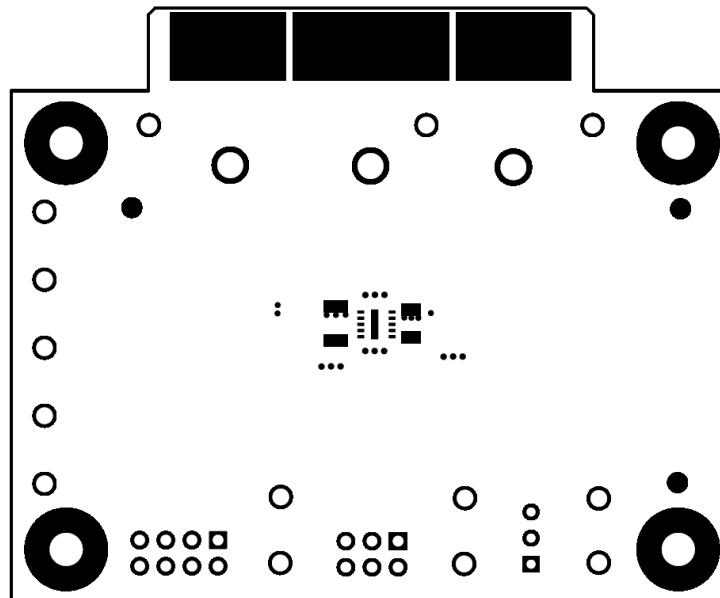


Figure 37. Fixed Output Board Layout - Top Soldermask

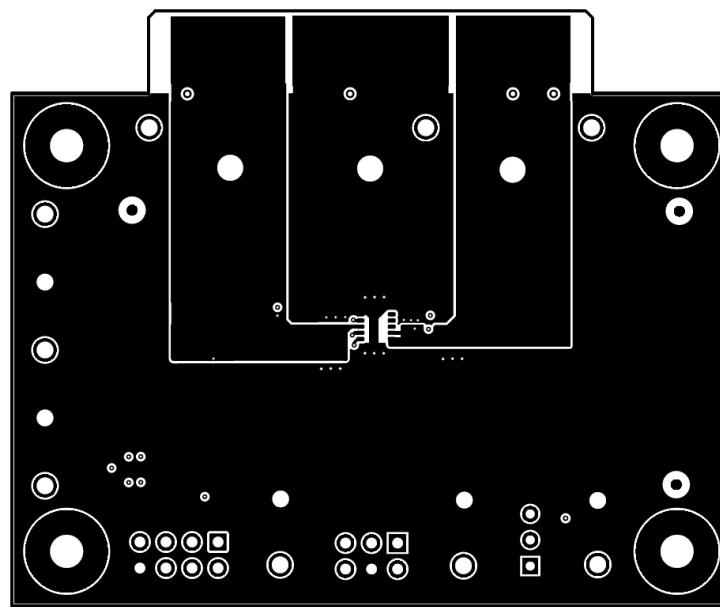


Figure 38. Fixed Output Board Layout - Top Layer Copper

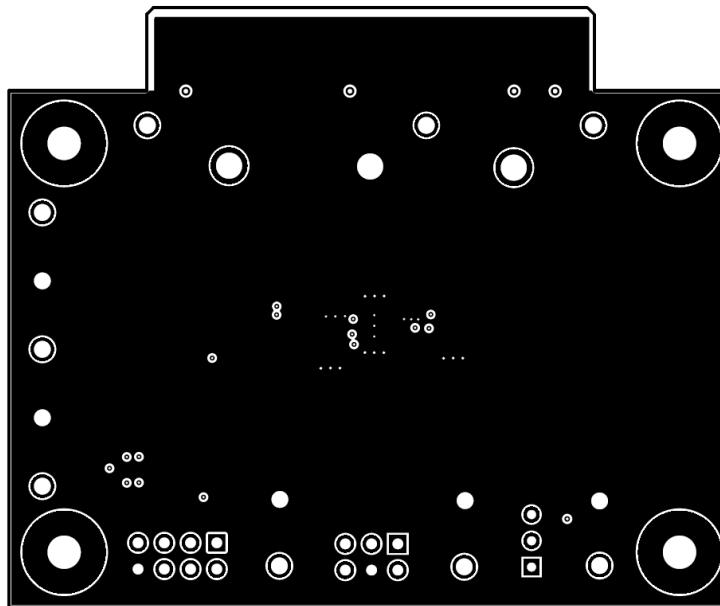


Figure 39. Fixed Output Board Layout - Mid Layer 1 (under top layer) Copper

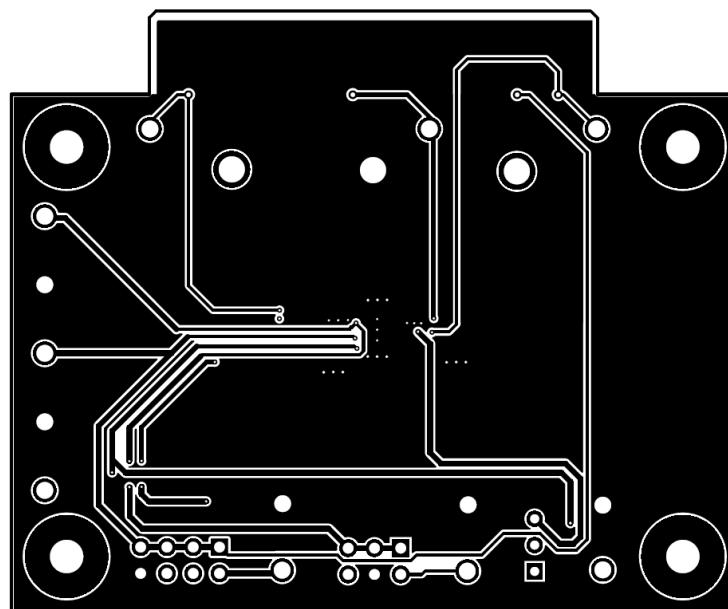


Figure 40. Fixed Output Board Layout - Mid Layer 2 (above bottom layer) Copper

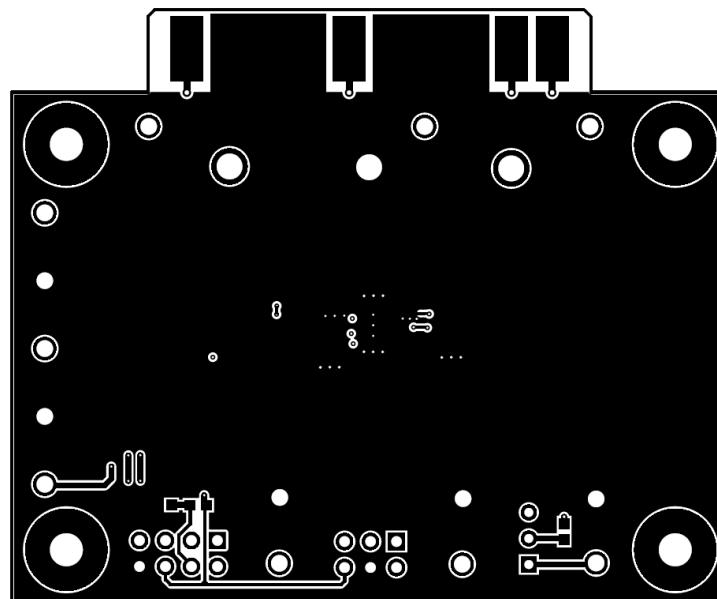


Figure 41. Fixed Output Board Layout - Bottom Layer Copper

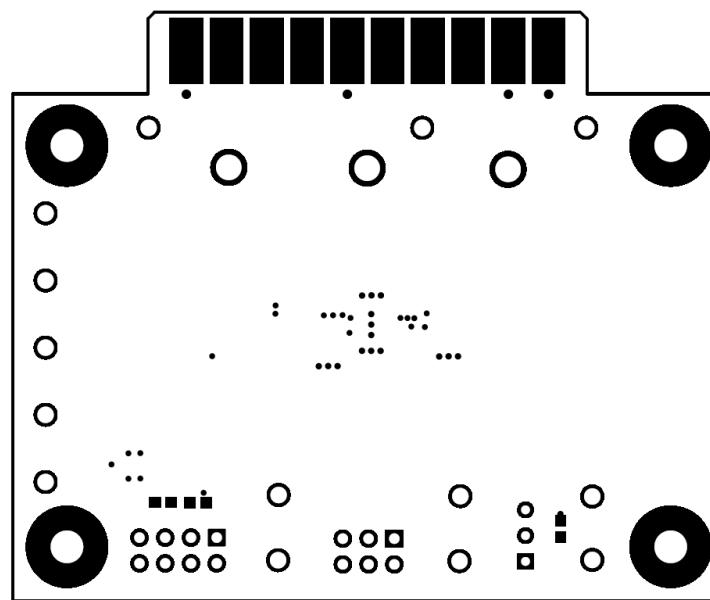


Figure 42. Fixed Output Board Layout - Bottom Soldermask

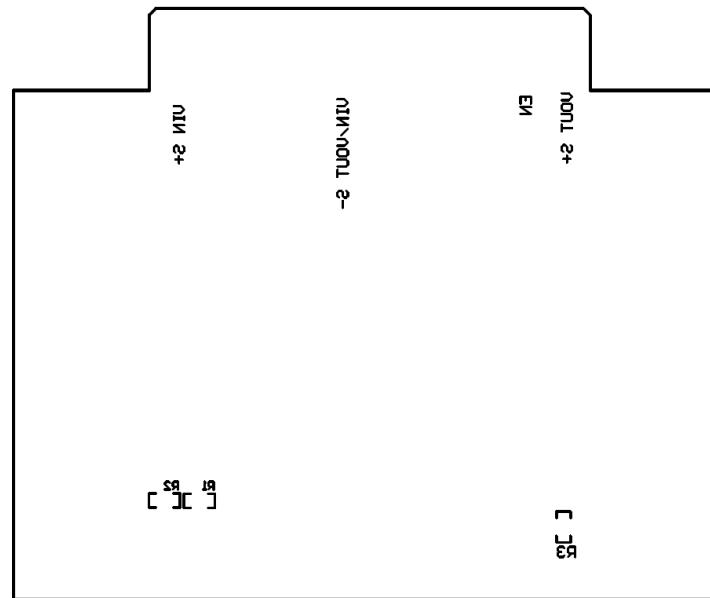


Figure 43. Fixed Output Board Layout - Bottom Overlay

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Original (October 2017) to A Revision

Page

• Changed title; made updates throughout document to include all board options for module family	1
--	---

STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
 - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

3 Regulatory Notices:

3.1 United States

3.1.1 *Notice applicable to EVMs not FCC-Approved:*

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 Notice for EVMs delivered in Japan: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。 http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page

3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/lsts/ti_ja/general/eStore/notice_02.page
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/lsts/ti_ja/general/eStore/notice_02.page

3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

4 EVM Use Restrictions and Warnings:

- 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
- 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
- 4.3 *Safety-Related Warnings and Restrictions:*
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
- 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
 - 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
 - 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
 - 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.
 - 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2018, Texas Instruments Incorporated

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025