

TVS3300DRV 33-V Precision Surge Protection Clamp Evaluation Module

This user guide describes the characteristics, operation, and use of the TVS3300DRV Precision Surge Protection Diode Evaluation Module (EVM). The TVS3300DRV is a precision clamp that keeps ultra-low and flat clamping voltage during transient over-voltage events like surge. This user guide includes setup instructions, schematic diagrams, a bill of materials, and printed-circuit board layout drawings for the EVM.

Contents

1	Introduction	2
2	Board Setup	2
3	Testing	3
3.1	Surge Testing	3
3.2	ESD Testing	5
4	Schematic.....	6
5	Board Layout	7
6	Bill of Materials	8

List of Figures

1	TVS3300DRV EVM Circuit Board Setup	2
2	2-Wire Protection Model	3
3	2-Wire Protection Test Circuit.....	3
4	3-Wire Digital I/O Protection Test Circuit	4
5	TVS3300DRV 4-Wire Interface Schematic.....	4
6	TVS3300DRV Surge Test Waveform	5
7	TVS3300DRV EVM Board Schematic	6
8	TVS3300DRV EVM Top Layer.....	7
9	TVS3300DRV EVM Bottom Layer	7

List of Tables

1	ESD Test Probe Point Required Jumper Connections	5
2	Bill of Materials	8

1 Introduction

Texas Instrument's TVS3300DRV evaluation module helps designers evaluate the operation and performance of the TVS3300DRV device. The TVS3300DRV is a precision clamp that keeps ultra-low and flat clamping voltage during transient over-voltage events like surge. With TI's precision surge technology, the TVS3300DRV's clamping voltage barely changes no matter how high the surge current. The TVS3300DRV also responds fast to the surge to limit overshoot voltage during clamping. Used in the system, its superior voltage suppression performance ensures a safe environment for downstream protected circuits.

2 Board Setup

This TVS3300DRV EVM board includes two sets of screw terminal headers for general purpose inline testing of various connector configurations. There are also two banana plug input ports for easy testing along with 4-50- Ω SMA connectors for convenient connection to an oscilloscope for testing. [Figure 1](#) shows the basic setup of the EVM along with important connector locations.

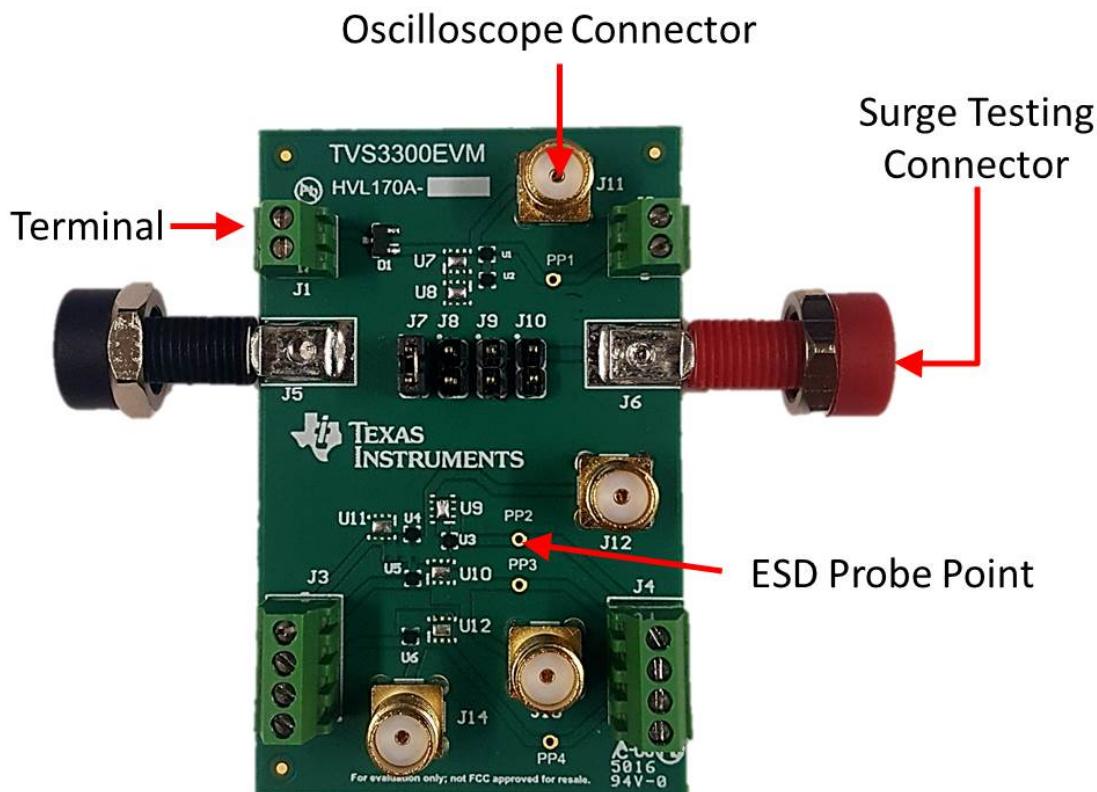


Figure 1. TVS3300DRV EVM Circuit Board Setup

3 Testing

Section 3.1 and Section 3.2 outline the testing procedures for the TVS3300DRV EVM circuit board along with their respective results. Care must be taken when testing any EVM in order to avoid potential damage to the board.

3.1 Surge Testing

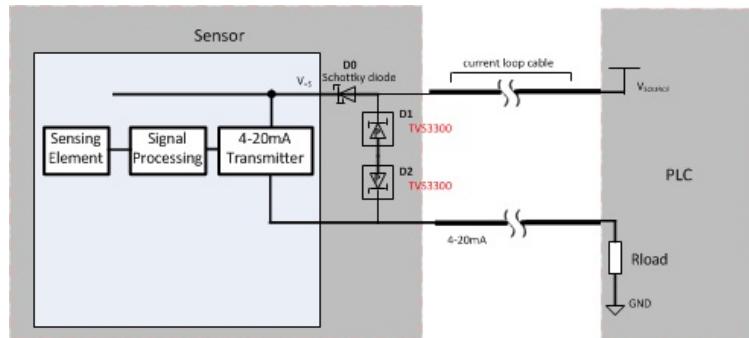


Figure 2. 2-Wire Protection Model

For the surge testing, there are two distinct setups. In Figure 2, two TVS3300DRV's D1 (U1) and D2 (U2) protect the 4-20-mA sensor transmitter in a back-to-back configuration by limiting the voltage difference between the two wires connected to the transmitter. In mis-wiring and negative surge situations, Schottky diode D0 (D1 in Figure 3) keeps the current from flowing reversely from the transmitter.

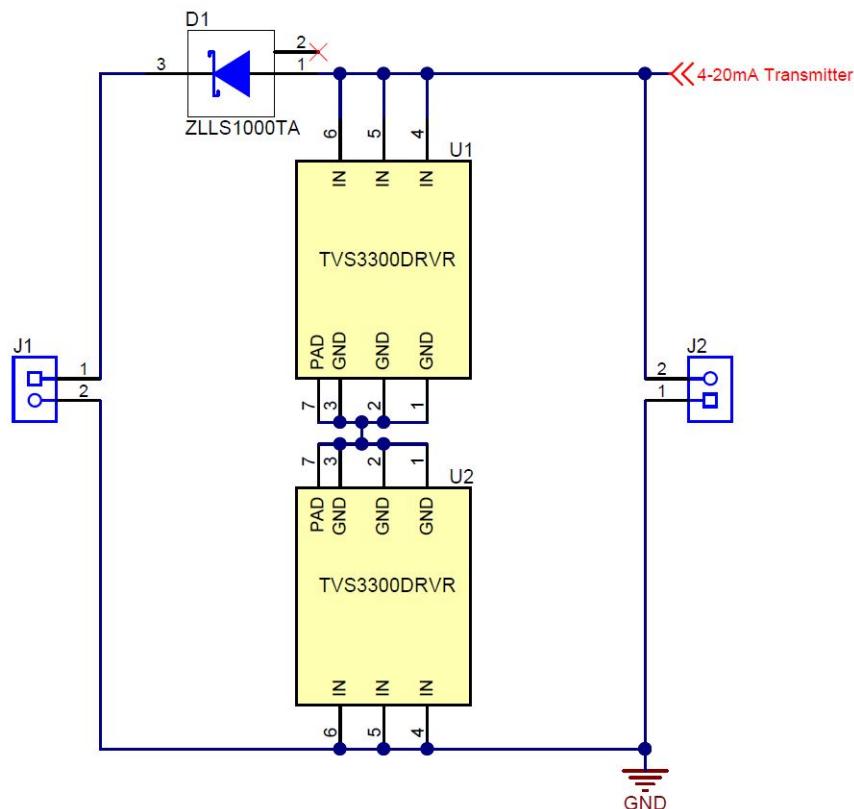


Figure 3. 2-Wire Protection Test Circuit

The next surge test is modeled from [Figure 4](#) with the addition of a second I/O line. The EVM jumpers J7-J10 can be used to select which line is to be tested. [Table 1](#) shows the corresponding SMA connector for each jumper position.

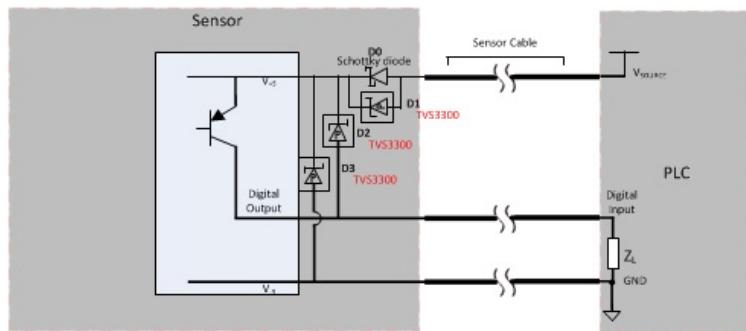


Figure 4. 3-Wire Digital I/O Protection Test Circuit

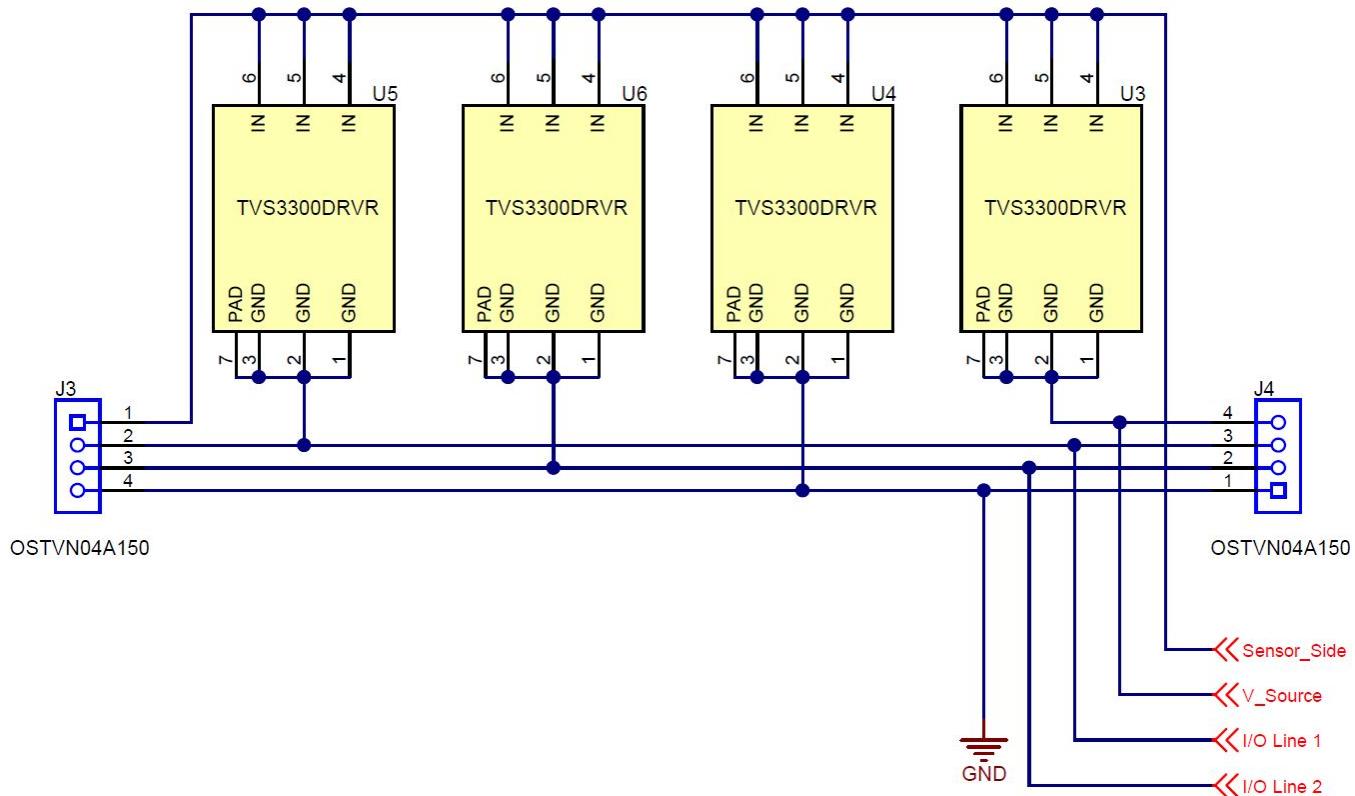


Figure 5. TVS3300DRV 4-Wire Interface Schematic

From [Figure 5](#), four TVS3300DRV's protect the switch output sensor transmitter from surge and mis-wiring conditions. U3 blocks the reverse current when the system is mis-wired and takes most of the current during positive and negative surge. U5 and U6 protects the sensor transmitter by clamping the voltage between power supply and the digital output during surge. U4 protects the sensor transmitter by clamping the voltage between power supply and the ground return during surge. [Figure 6](#) shows a 35-A surge test done on the TVS3300DRV EVM. As can be seen from the waveform, the TVS3300 effectively handles this surge and returns to normal conditions in less than 40 μ s.



Figure 6. TVS3300DRV Surge Test Waveform

3.2 ESD Testing

The TVS3300DRV also provides ESD protection up to ± 8 -kV contact and ± 15 -kV air gap according to IEC 6100-4-2. After connecting to the appropriate test equipment, evaluate the ESD protection provided by the TVS3300DRV by using an ESD simulator on one of the probe points (PP#) to create an ESD event. For specific information on ESD testing procedures, see the application report, [IEC 61000-4-x Tests for TI's Protection Devices](#).

Table 1 shows the correlating jumper position for the EVM based on the target probe point to be tested. Further test connection details can be seen in Figure 7.

Table 1. ESD Test Probe Point Required Jumper Connections

ESD Probe Point	Required Jumper Position	Output Waveform SMA Connector
PP1	J7	J11
PP2	J8	J12
PP3	J9	J13
PP4	J10	J14

4 Schematic

Figure 7 shows the circuit schematic for the TVS3300DRV EVM.


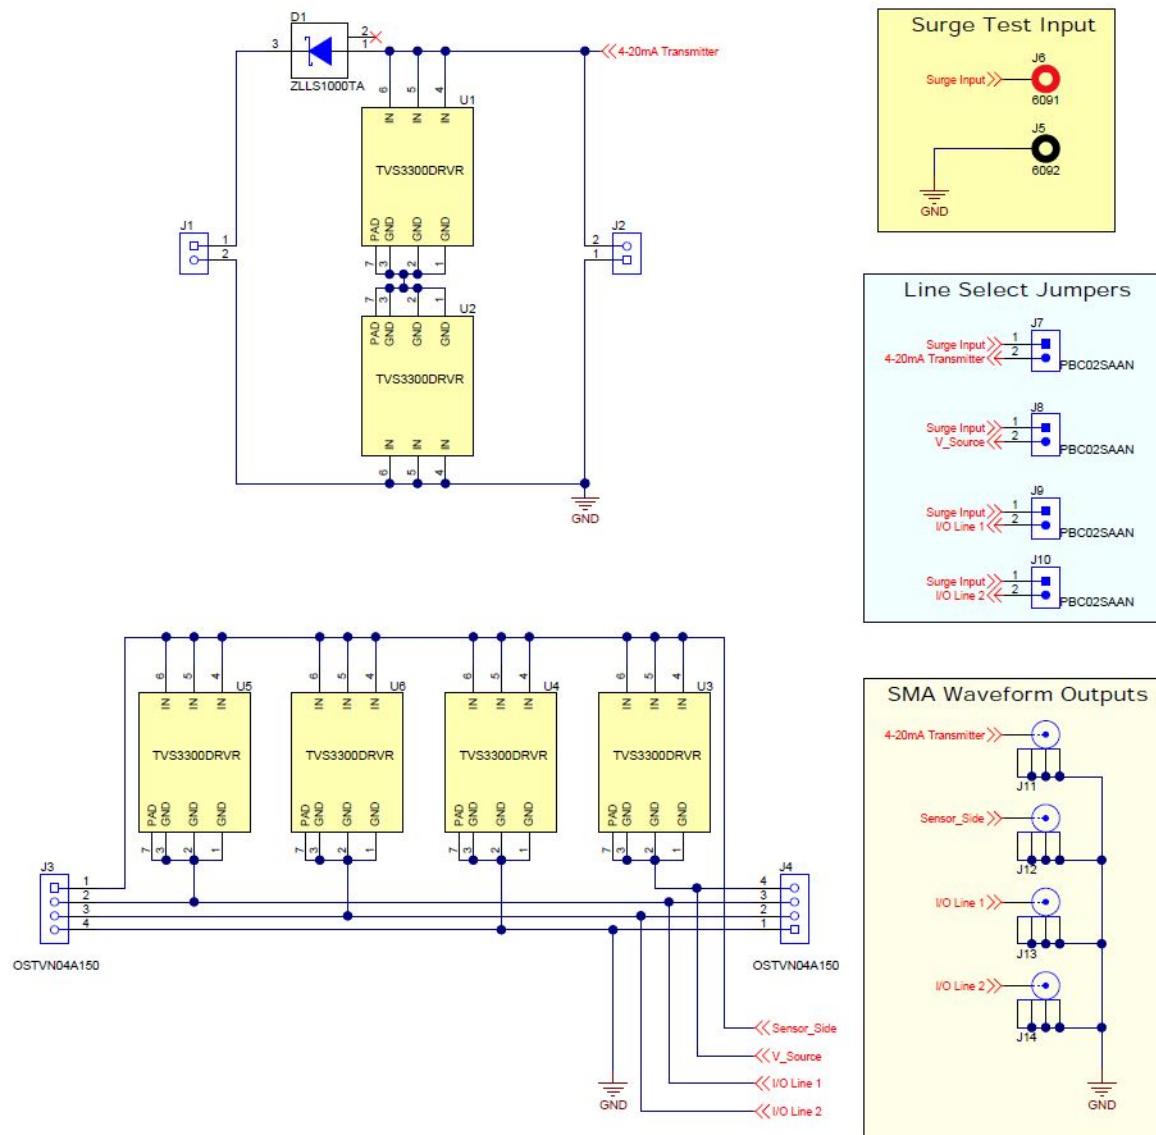


Figure 7. TVS3300DRV EVM Board Schematic

5 Board Layout

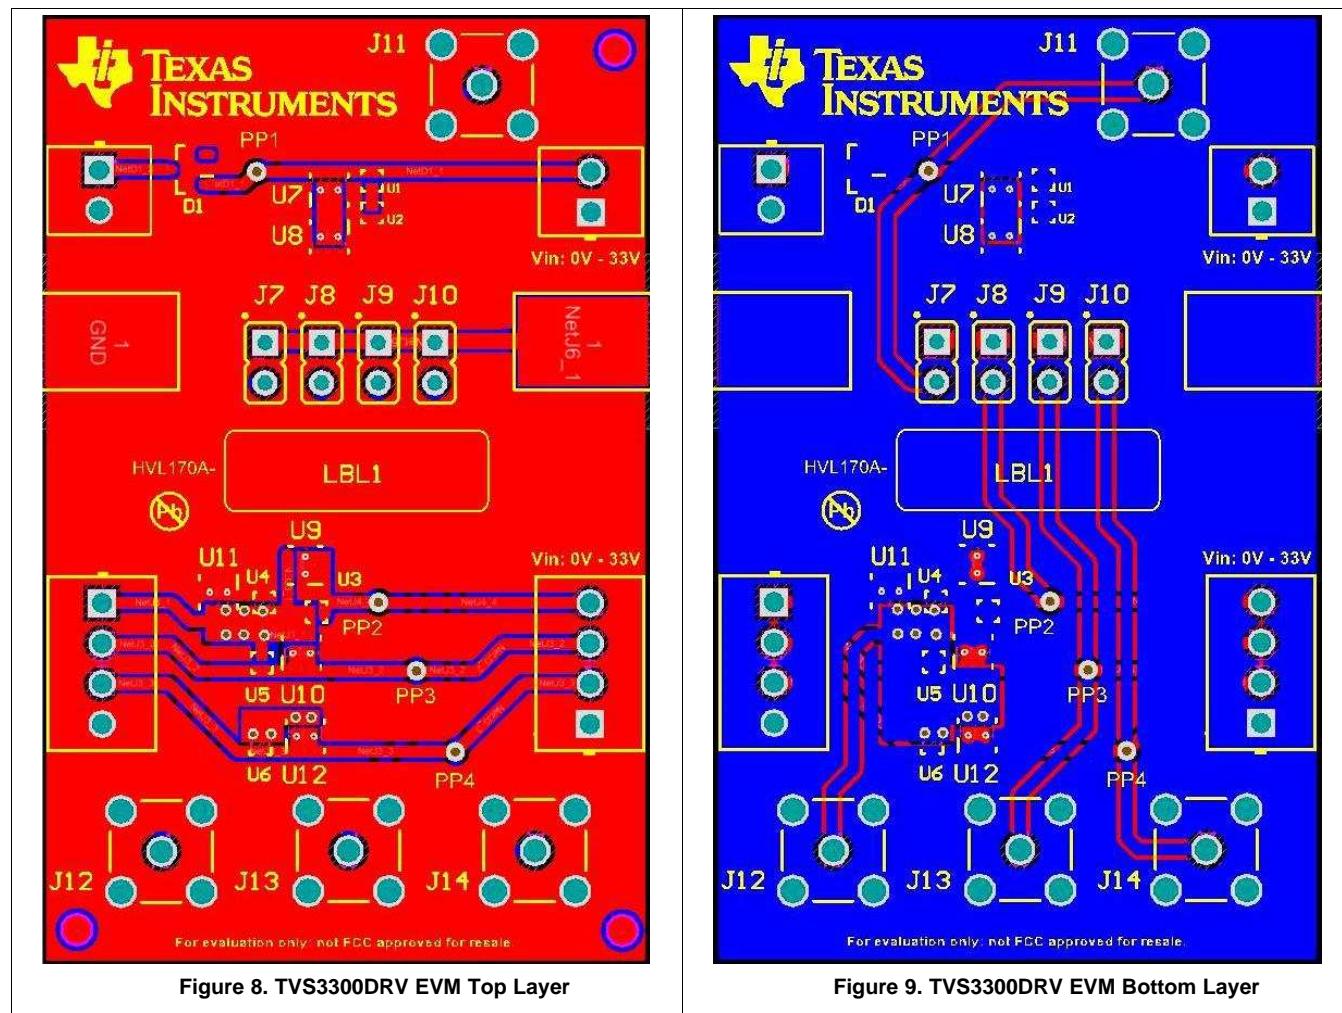

6 Bill of Materials

Table 2. Bill of Materials

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer
D1	1	—	Diode, Schottky, 40 V, 1.16 A, AEC-Q101, SOT-23	SOT-23	ZLLS1000TA	Zetex
J1, J2	2	—	Terminal Block, 2.54 mm, 2x1, Brass, TH	On-Shore_OSTVN02A150	OSTVN02A150	On Shore Technology
J3, J4	2	—	Terminal Block, 2.54 mm, 4x1, Brass, TH	On-Shore_OSTVN04A150	OSTVN04A150	On Shore Technology
J5	1	—	Standard Banana Jack, Insulated, Black	6092	6092	Keystone
J6	1	—	Standard Banana Jack, Insulated, Red	6091	6091	Keystone
J7, J8, J9, J10	4	—	Header, 100 mil, 2x1, Gold, TH	Sullins_PBC02SAAN	PBC02SAAN	Sullins
J11, J12, J13, J14	4	—	SMA Straight PCB Socket Die Cast, 50 Ω, TH	TE_5-1814832-1	5-1814832-1	TE Connectivity
SH-J5	1	—	Shunt, 2.54 mm, Gold, Black	Wurth_60900213421	60900213421	Wurth Electronics
U1, U2, U3, U4, U5, U6	6	—	33-V Precision Surge Protection Clamp, DRV0006A (WSON-6)	DRV0006A	TVS3300DRV	Texas Instruments

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025